

Refer to this guide for steps on how to connect your modem and use your Wi-Fi network


INCLUDED EQUIPMENT



SETTING UP YOUR MODEM

- 1 From the **back** of your **modem**, plug the Phone Cord into the grey **DSL** port. Then, plug the other end of the phone cord into a **telephone jack**.
- 2 Now, from the **back** of your **modem**, connect the **Power Adapter**. Then, plug the **Power Adapter** into an external **power source**. Power up your device by pressing the white On/Off switch.

It may take up to **10 minutes** for the modem to connect to the Internet.
- 3 From the **back** of your modem, plug the ethernet cord into any **LAN** port. Now, plug the other end of the ethernet cord into a working ethernet port on your computer.
- 4 Check that the front panel of your modem is behaving as such:
LAN (blinking green if connected to computer)
Power (solid green)
DSL (solid green)
Internet (solid or blinking green)

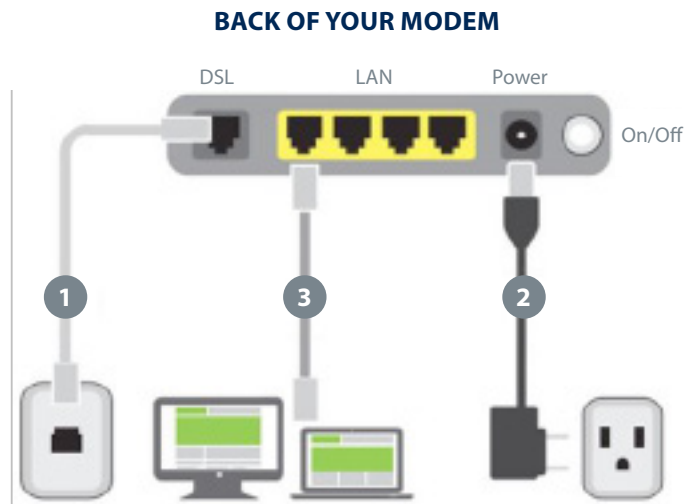

CONNECTING DEVICES TO YOUR WI-FI NETWORK

- A In the Wi-Fi settings of your device, look for the wireless network named "ACNBB" followed by the last four characters of your MAC address. The MAC address can be found on the bottom of your device. Then click or tap to connect to it.
- B Once you have selected your wireless network from your device, you will be prompted to enter your password. Note: your password is your Modem's MAC address. (Password must be entered using lower case characters)



CONGRATULATIONS! YOU HAVE SUCCESSFULLY SETUP YOUR ACN MODEM!

For additional support on this product or for installation help, please visit myacncanada.ca and locate the support options to speak with a Technical Support Agent.

Référez-vous à ce guide pour les étapes à suivre pour connecter votre modem et utiliser votre réseau Wi-Fi

MATÉRIEL INCLUS



Câble ethernet



Câble téléphonique



Adaptateur de courant



Filtre téléphonique

BRANCHEMENT DE VOTRE MODEM


- 1 Branchez le câble téléphonique dans la prise **DSL** à l'**arrière du modem**. Ensuite, connectez l'autre bout du câble téléphonique dans une **prise téléphonique**.
- 2 Branchez votre **adaptateur de courant** à l'**arrière du modem**. Ensuite, connectez votre **adaptateur de courant** dans une prise murale. Allumez votre appareil en pesant sur l'interrupteur blanc On/Off.

Cela peut prendre jusqu'à **10 minutes** pour que le modem se connecte à l'Internet.

- 3 Branchez câble Ethernet dans n'importe quelle prise **LAN** à l'**arrière du modem**. Ensuite, branchez l'autre bout du câble Ethernet dans un port Ethernet fonctionnel de votre ordinateur.

- 4 Vérifiez que le panneau avant de votre modem fonctionne comme tel:
LAN (vert clignotant si connecté à un ordinateur)
Power (vert solide)
DSL (vert solide)
Internet (vert solide ou clignotant)

ARRIÈRE DU MODEM

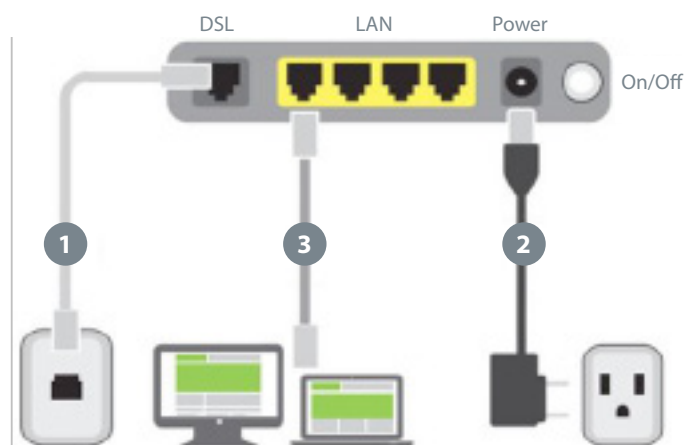

CONNEXION DE VOS APPAREILS À VOTRE RÉSEAU WIFI

- A Dans les paramètres Wi-Fi de votre appareil, recherchez le nom de votre réseau sans fil. « ACNBB » L'adresse MAC peut être trouvée en bas de votre appareil. Ensuite, cliquez ou appuyez pour le connecter.
- B Lorsque vous serez invité à entrer la clé de sécurité ou le mot de passe, veuillez entrer l'adresse MAC de votre appareil (en lettres minuscules) et sélectionner Connect afin d'accéder à Internet.



FÉLICITATIONS! VOUS AVEZ INSTALLÉ VOTRE INTERNET HAUTE VITESSE ACN AVEC SUCCÈS!

Pour obtenir de l'aide supplémentaire sur ce produit ou pour obtenir de l'aide avec l'installation, veuillez visiter la section Soutien de myacncanada.ca pour parler à un agent de soutien technique.